

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

YM-01 Fly Marking control system manual

1. Painting interface



1.1 File operation



	save		Save as
---	------	---	---------


Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

	open		create a new file
	Into hibernation, then click the screen to wake up. (Note: it is not off state)		Undo
	reduction		Laser control card related parameter setting.

1.2 Zoom bar

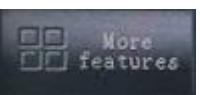

	Zoom in the contents of the view area		Reduce the size of the view area
	Revert to the view's original area		Enter the system settings interface
	Start red light, preview the graphics.		

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.3 Toolbar

Make tools



	Click the text to select text, time, date, serial number and other new.		PLT vector file import
	Barcode generation tools		Edit barcode attributes
	Text content editing		delete
	Edit page object list		Coding delete, copy, copy files by clicking on the management.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

Operating tools




	rotate to the left		rotate to the left
	Move up		Move Downward
	move to the left		move to the right
	mobile		Select graphics, click copy, then click on the blank space, copy the same graphics.
	Multiple choice graphics		Select all graphics
	Fill the graphic settings		

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

Scale bar

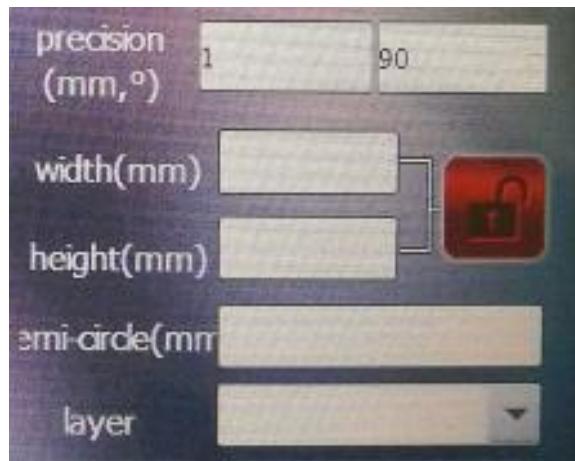

A horizontal slider with a value of 1.	Height adjustment
A horizontal slider with a value of 1.	Width adjustment
A horizontal slider with a value of 1.	Character radian adjustment
A red square icon with a white padlock symbol.	Lock solution or open, corresponding to the same regulation xy, and were adjusted.
A horizontal slider with values 1 and 90.	Adjust the accuracy of the operation

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.4 Object list




Conversion function: When some texts overlap or a text is not in the view area, click conversion button into the area where the text is in and select the text.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.5 Text editing sub interface

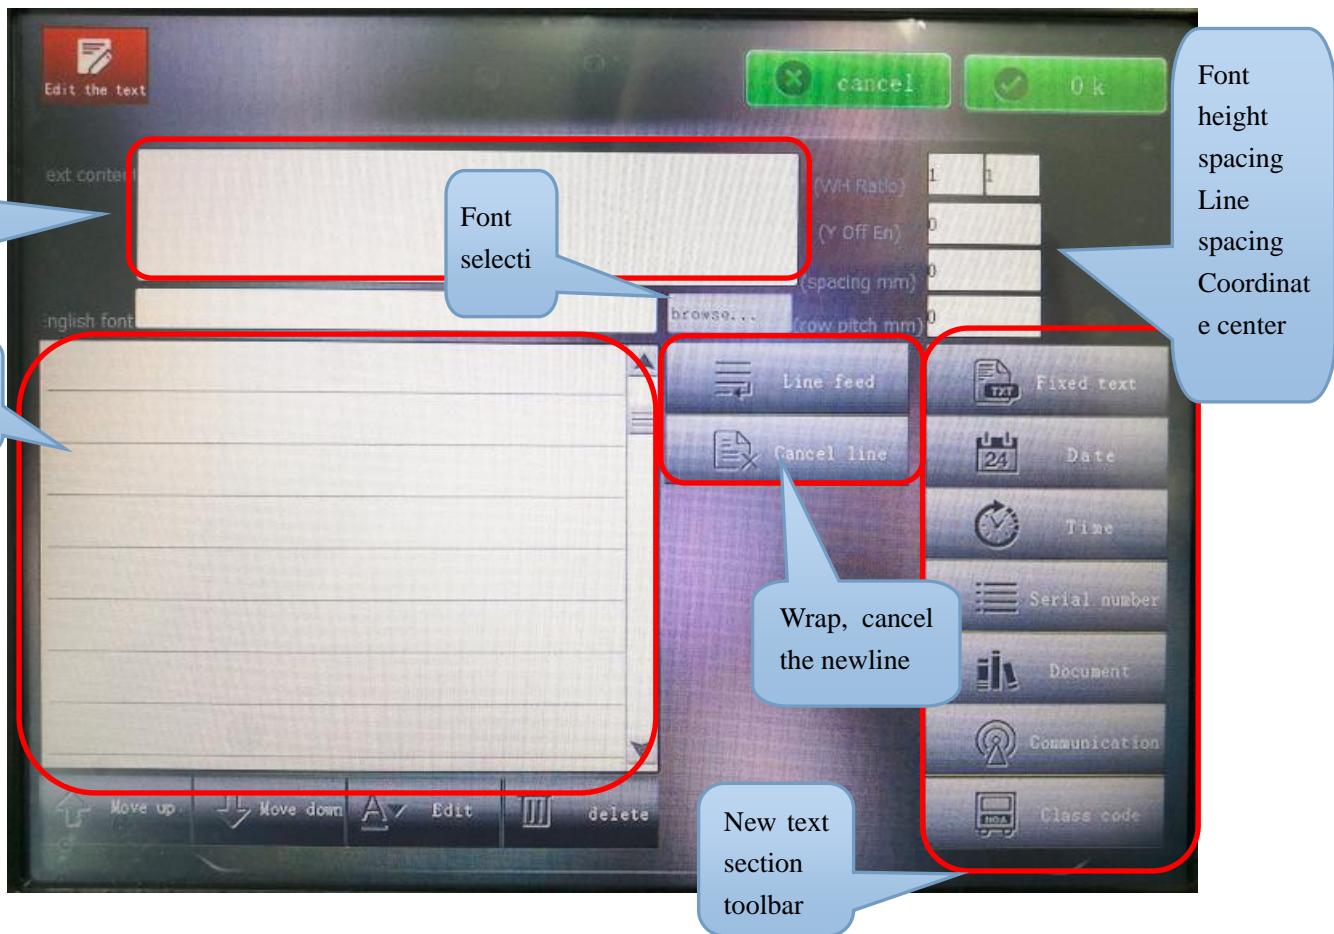

Text editing interface: Text content display, text segment list, function keys.

Text content display bar: Displays the list of input texts.

Font



Font height, spacing, line spacing, coordinate center information editing:

Jiatai International Company India


Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126



Function keys:



: Insert fixed text.

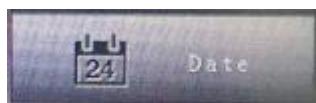

: Insert the date text.



: Insert time text.



: Insert the serial number text.



: Insert txt file.



: Edit serial communication files.




: Edit shift information file.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126




:Use the line feed button to edit multi-segment text, use the text to select a line feed, and click the linefeed button.

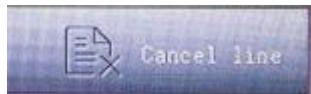

:Cancel the newline.



:The selected text segment moves up.

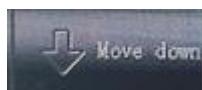

:The selected text segment moves down.



:Modify the currently edited text segment



:Delete the currently edited text segment.



:Save the current edited text, and exit the current interface




: Cancel the current edit text, exit the current interface.

Keyboard input method:



Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

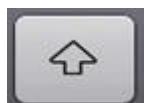

: Enable English capital input.



: Enable English input.




: Enable pinyin input.



: Enable figures, punctuation input.

1.3 Font preview selection interface

Font preview selection interface, you can preview the font selection font is as follows:

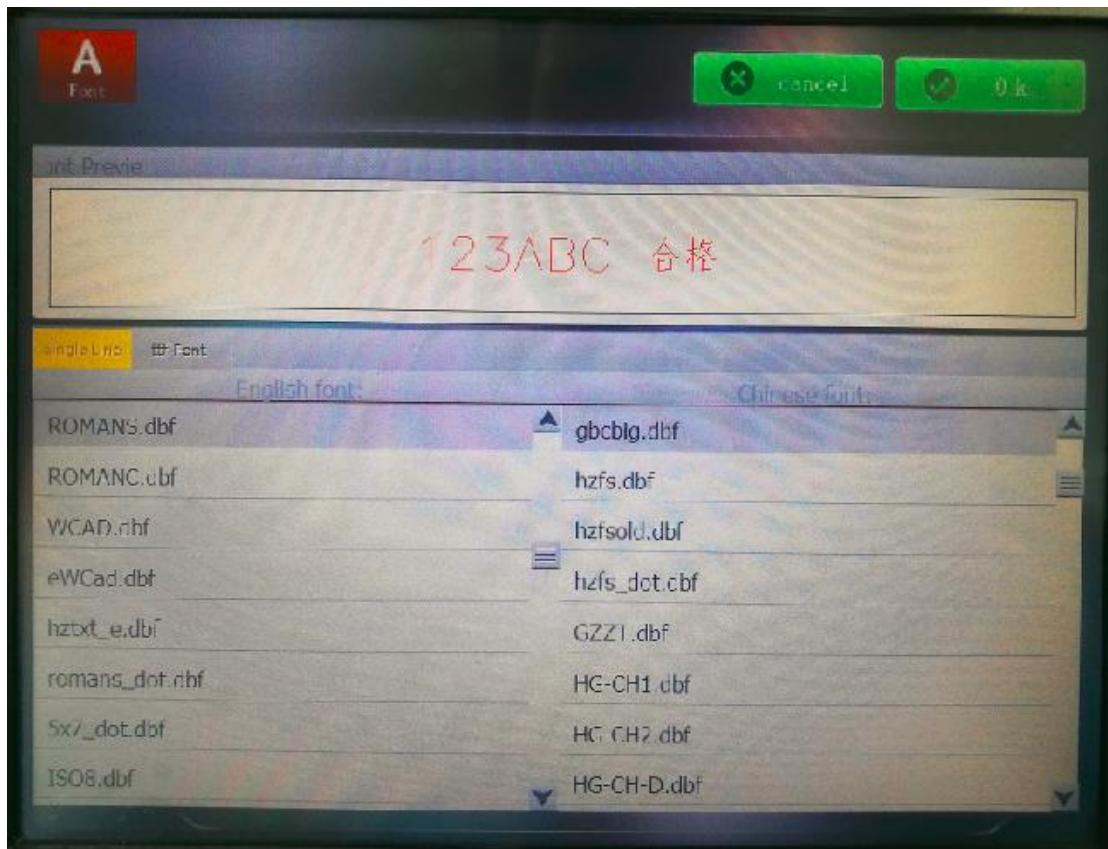


Select the file in the drawing interface, click the Font icon, enter the font library.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.6 date editor sub-interface

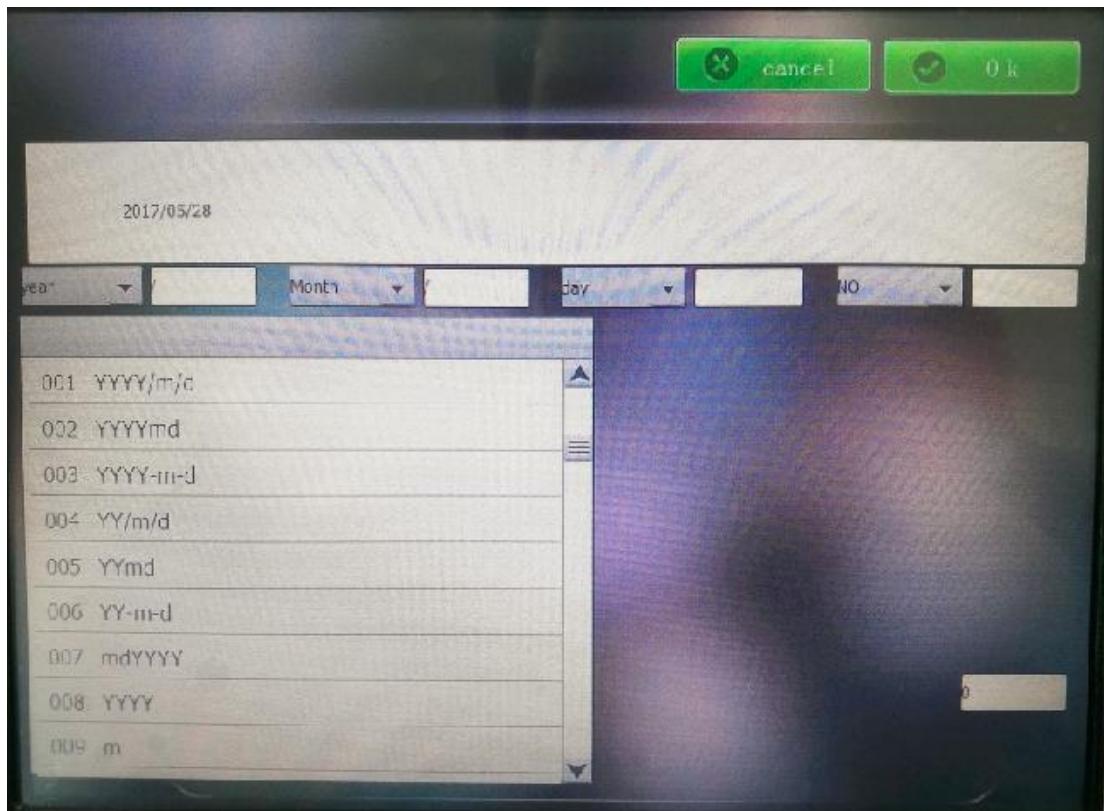

The system supports multiple formats of date and time, the list box lists the date of various formats to choose from, if the user needs to set their own format, first select a column, and then click edit to modify their format.

Date Offset: How many days to offset from the current time. If the current time is 2014/7/28, enter 2

Time content will become 2014/7/30.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.7 serial number editing sub interface

multiple	<input type="text" value="3"/>	Fill	<input type="text" value="0"/>
Initial value	<input type="text" value="0"/>	Stop value	<input type="text" value="999"/>
step	<input type="text" value="1"/>	Repeat	<input type="text" value="0"/>
Current value	<input type="text" value="0"/>	Repeat value	<input type="text" value="0"/>

Cycle Cancel the prefix

Digit: digit of serial number. For input 3, then the content of serial number is XXX.

The system default is 3 digits. Original value: original value of serial number.

Step size direction: used in setting counting sequences. for example 1 represents the increment of 1, -1 represents the decrement of 1.

Current value: The value of the current to paint.

Fill: input number fill character. The default value is zero fill characters. for example, the fill is 0, current value is 1, then the painting result is 001.

Stop value: The final painting number.

Repeat: The number of repeat numbers, The default value is 0, which represents the number of painting is 1. The value is 1, which represents the number of painting is 2.

duplicate value: Representing how many times the number painting. User can set the value and restart.


Cycle: checked represent the painting is over and restart painting.

Cancel the prefix: Banning the use of filling symbols. for example, edit a three digit number 000, after checking cancel the prefix, the value of painting become 0.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.8 Save file interface

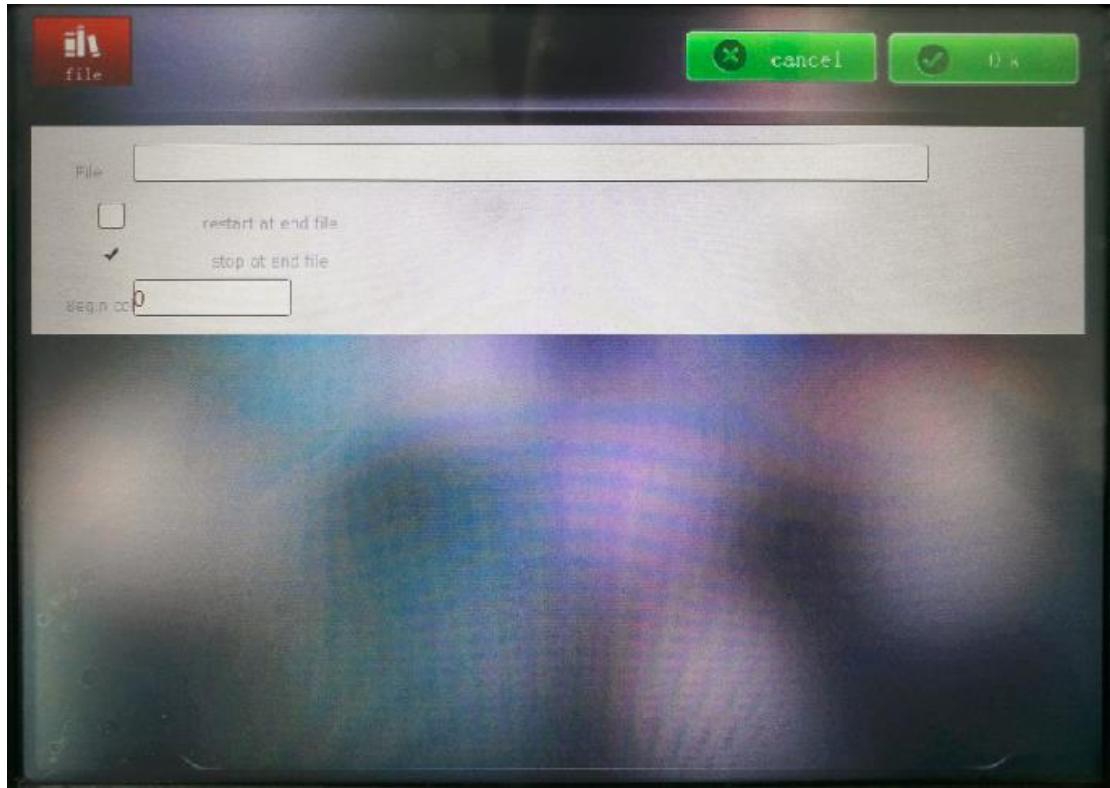

When creating the document text, you need to tick the text box.

Click the Browse button to select the desired txt file. Currently only supports * .txt format text file.

The end of the file to start again: Coding code to the end of the file, will read the beginning of the file coding.

End of the file to stop marking: Coding to the last line of the file will not start over.

Start line: start from the current line Coding, Coding can also be used before the query for progress.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.9 Save file interface



By selecting the top button, user can save file in the internal storage, SD card, USB storage.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.91 Code39 editing sub interface

Code39:

Text content:

Barcode height(mm): **Character Height (mm):**

Narrow strip width (mm): **Character width(mm):**

Extent Ratio: **Character pitch(mm):**

Top margin(mm): **x offset(mm):**

Bottom margin(mm): **y offset(mm):**

Left margin(mm): **Type** **Layer:**

Right margin(mm): **Reverse**

Code39 is consist of Arabic numerals. Interface is mainly aimed at the width of the barcode height and margin Settings. The margin in the case of reverse is effective. In order to bring out, some color material need to select reverse painting.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.92 Code128 setting sub interface

Code128:

Text content:

Edit

Barcode height(mm):	<input type="text" value="8"/>
Narrow strip width (mm):	<input type="text" value="0.2"/>
Blank Ratio:	<input type="text" value="1"/>
Top margin(mm):	<input type="text" value="2"/>
Bottom margin(mm):	<input type="text" value="2"/>
Left margin(mm):	<input type="text" value="2"/>
Right margin(mm):	<input type="text" value="2"/>
character set: <input type="checkbox"/> A <input type="checkbox"/> B <input type="checkbox"/> C <input checked="" type="checkbox"/> Auto	
<input type="checkbox"/> Type <input type="checkbox"/> Reverse	
✓ ✗	
Character Height (mm): <input type="text" value="3"/>	
Character width(mm): <input type="text" value="3"/>	
Character pitch(mm): <input type="text" value="0"/>	
x offset(mm): <input type="text" value="0"/>	
y offset(mm): <input type="text" value="0"/>	
Layer: <input type="text" value="0"/>	

Code128 possess character set, A,B,C. A character set is for Numbers, uppercase letters, and some special characters. B character set include digital, lowercase letters, and some special characters. C only include digital character set, but compress coding width. It is recommended to use the Auto, which is optimal compression bar code.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

1.93 QR setting sub interface

DataMatrix:

Text content:

Edit

Cell Width(mm) size **Set**

Proportional circle (%)

Outer ring number

Count

Reverse dot Matrix Matrix

Layer:

QR code is consist of mask, model, error correction. Bitmap print QR code currently supported.

Cell Width: A unit takes up a square side length.

Proportional Circle: In the area of occupied by printing.


Outer Ring Number: In reverse, the outer ring takes up the number of turns.

Count: The number of painting small round.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

2 Printing interface

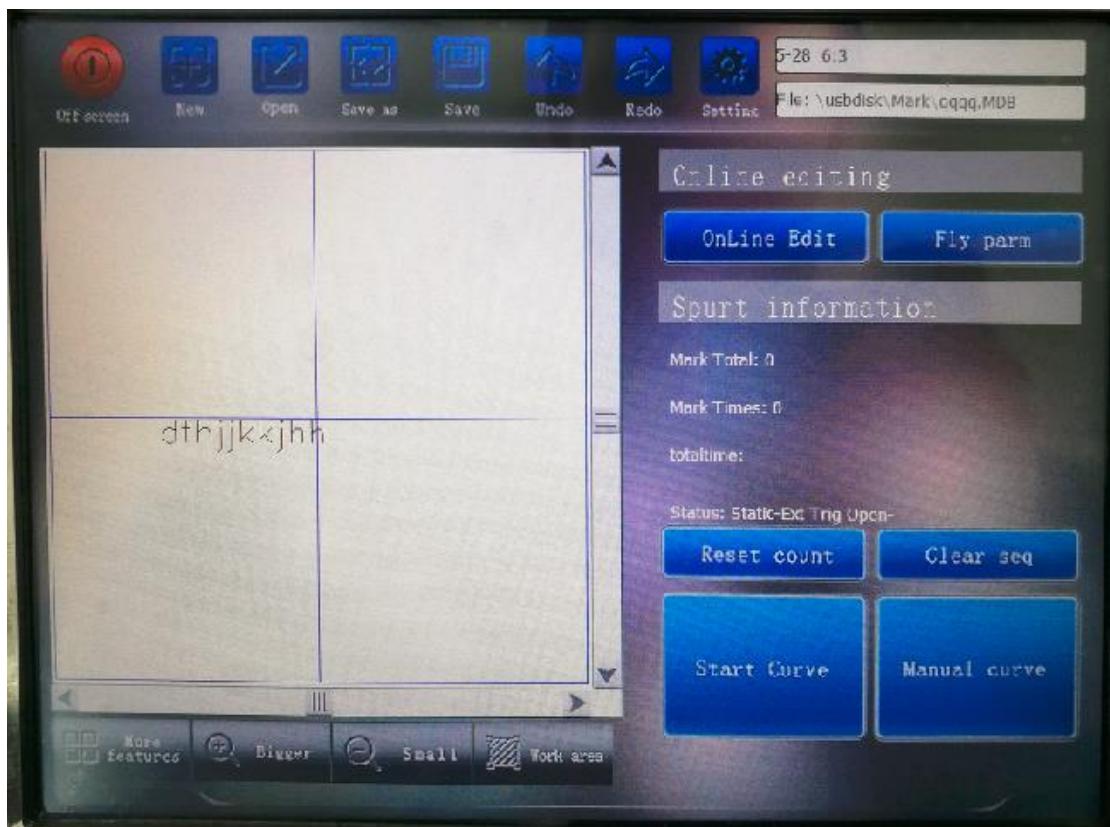

Button Description:

Start button, there must be a text segment, click on the effective



Printing , otherwissse button action is prohibited.



:Manual printing button. In the code running state, click the code button. click once at a time.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126



: Control card related parameters Settings.



: get rid of the serial number count.




: Adjust the content of working conditions



: Adjust the parameters under working conditions

2.1 control card Settings interface

2.2.1 Printing parameters

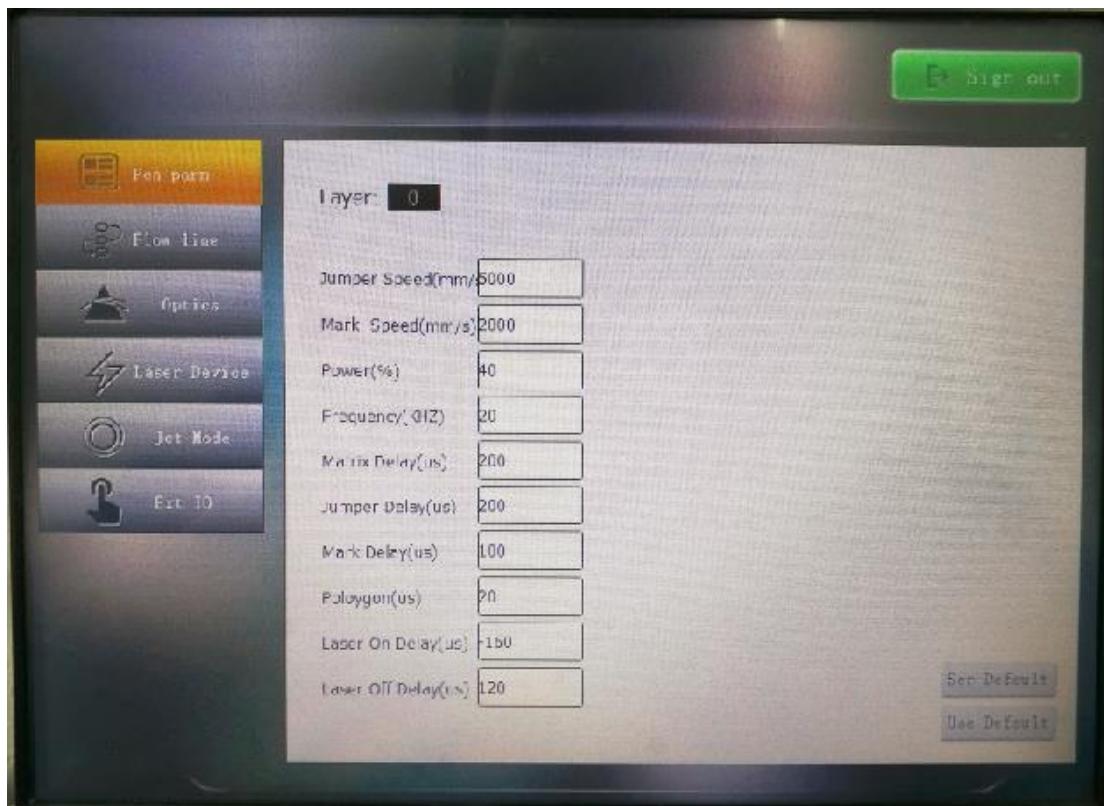

Jumper Speed: The galvanometer rotational speed when jumping.

Mark Speed: The galvanometer rotational speed when bright dipping

Power: Laser output power when printing. The greater the power, the deeper the dozen.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

Frequency: Laser light frequency. The greater the frequency, the better The consistency of line.

Laser On Delay: Adjust system by starting movement until the end of the laser with time lag. Time is too short - line beginning place without marking. Time is too long - line at beginning of marking is too heavy.

Laser Off Delay: Adjust the system at the end of the laser, movement to the end of time. Time is too long - line ends of marking is too heavy. Time is too short - line ends place without marking.


Polygon: Adjusting system When turn the time lag of. Time is too short - Angle becomes arc shape. Time is too long - corner will marking is too heavy.

Matrix Delay: When selecting a bitmap fonts, delay time of each printing point. the longer the time, the more heavy the marking

Set Default: Set the default printing parameters, click save

Use Default: export the default parameters had been set up

2.2.2 Assembly line

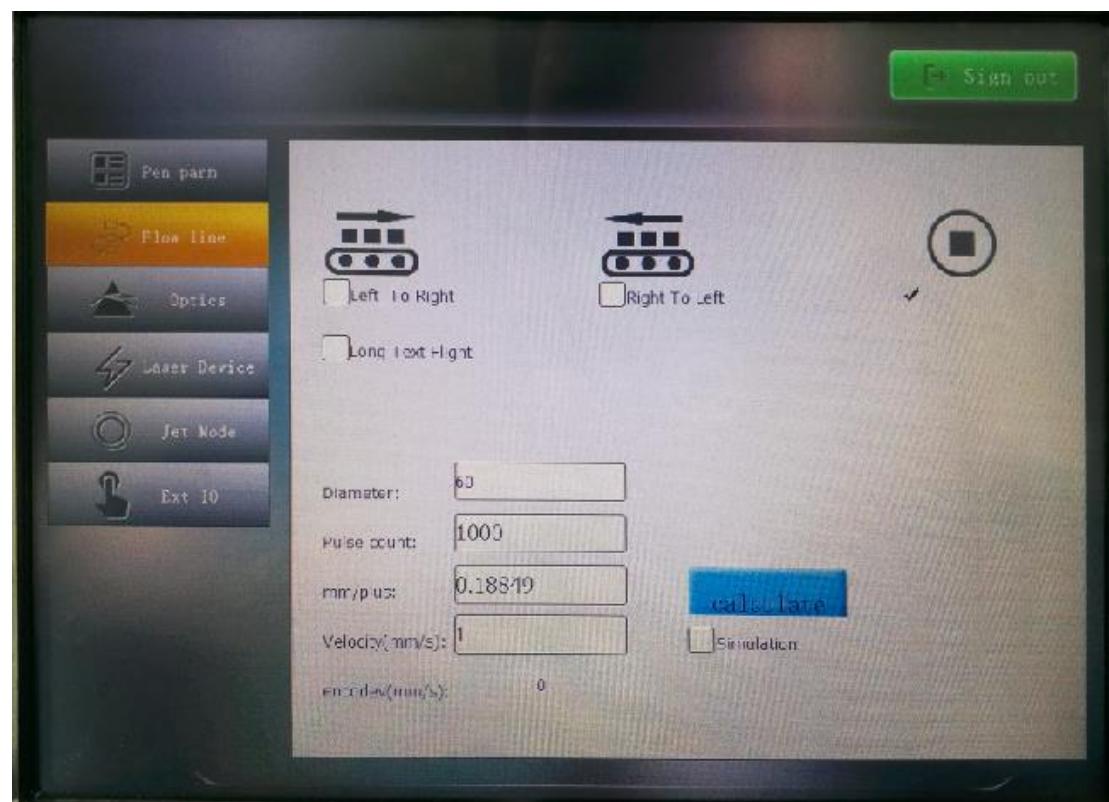

Assembly line direction: there are two set of assembly line direction At present:from left to right or from right to left. If encounter in the Y direction , it can be solved by axis transformation.

flight parameters with encoder and flight parameters (simulated flight) without encoder.

Simulation: Check represents the flight mode without encoder. Otherwise, represent external

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

encoders

Velocity(mm/s): Running speed of belt pulley. For example, 1000 represents running speed of 1000mm/s.

For example, the running speed of belt pulley is 20m/min, then converted to 1 s for 667 mm/s.

mm/plus: the length of Each pulse, unit is mm


Diameter: diameter of the scroll wheel.mm

Pulse Count: One revolution of the encoder pulse number.

Calculate: According to the current pulse number, diameter to calculate the product value when clicked.

Encoder Test: display the number of pulses of encoder .

2.2.3 optical paramete

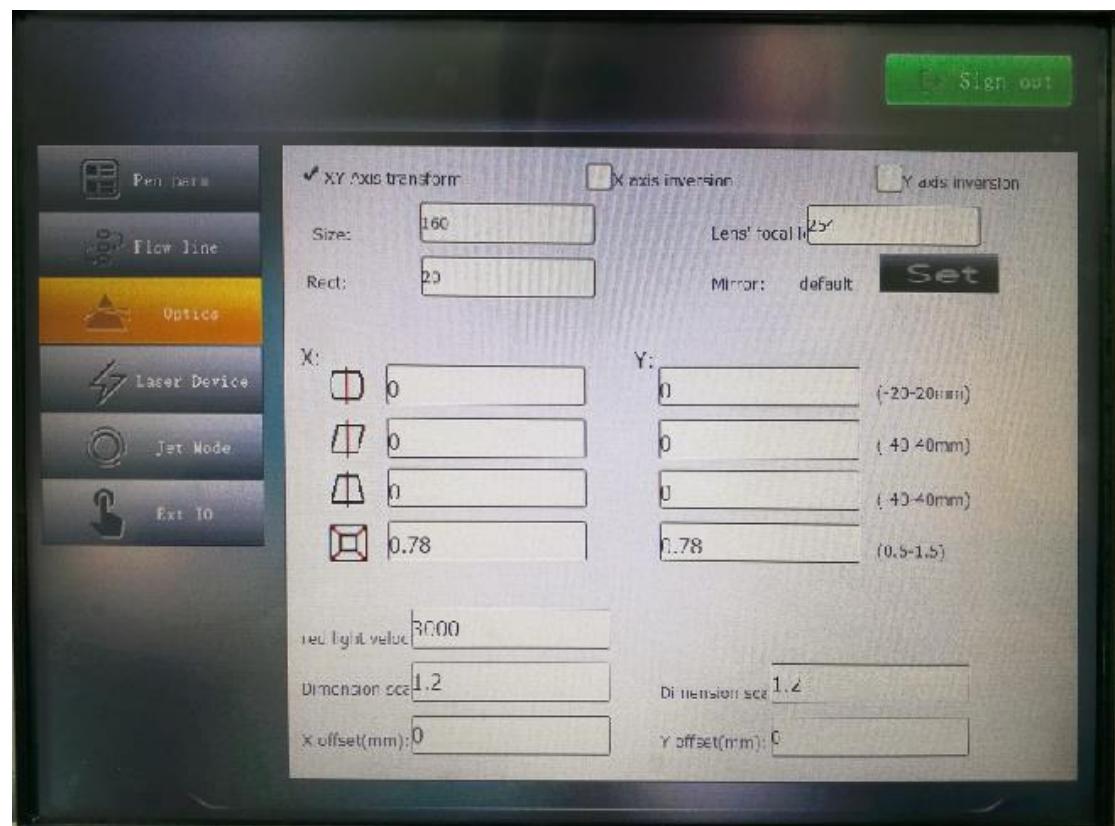

XY Axis transform: change the physical output.

X aixs inversion: the mirror of X axis .

Y aixs inversion: the mirror of Y axis.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

size: The size range output of the output field , 70mm represents 70x70.

rect: The size of a square output for debugging.


Correction includes bucket, rhombus, trapezoid, and proportion correction.

proportion correction generally is ok in the printing machine. The method of proportion correction as follows:

- 1, Set the size in focal length size interface
- 2, Set the size of marking the square to 20mm.
- 3, Enter the code interface, Check the square in advanced options interface.
- 4, Start printing, print the square.
- 5, Measuring the square X, Y axis length are 25,25, respectively, then The proportion coefficient of the X axis is 20/25, The proportion coefficient of the Y axis is 20/25

1.

2.2.4Laser

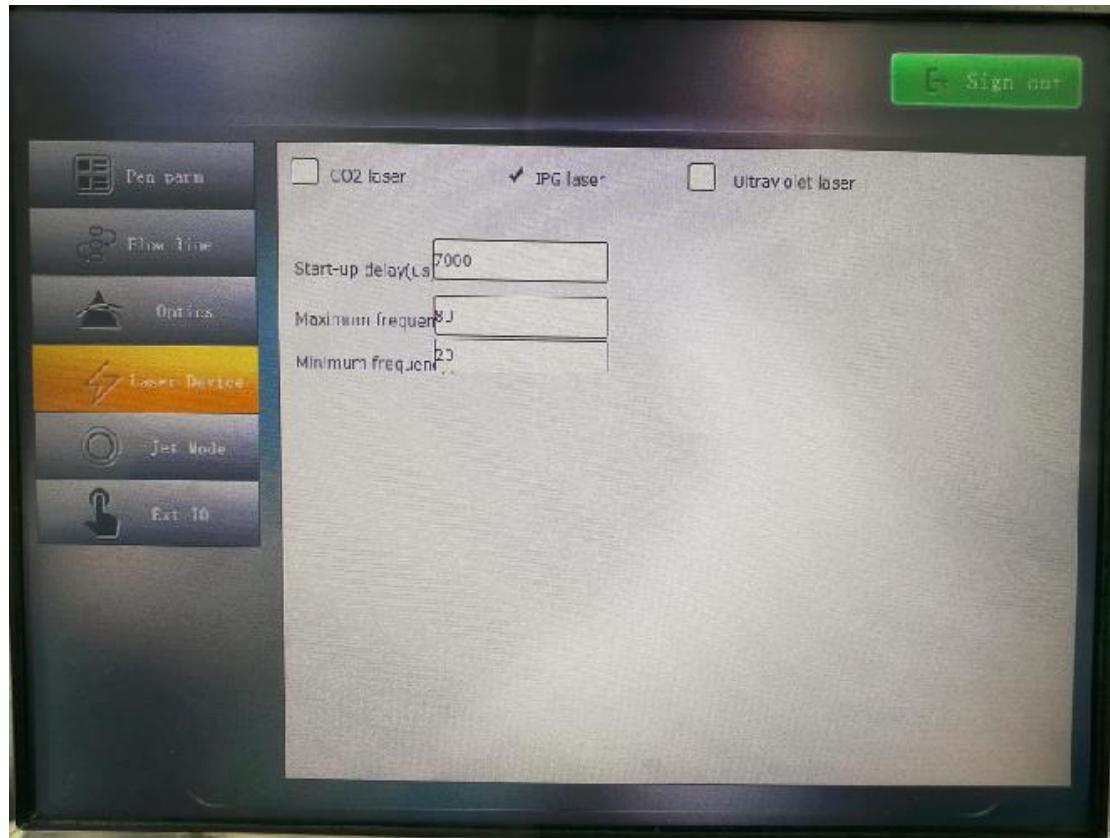

Laser Settings include optical fiber and CO2 laser.


CO2 laser settings include first pulse preionization and inhibition. The first pulse suppression is in the presence of focused

IPG laser settings include startup latency and frequency limits.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

2.2.5 external triggering

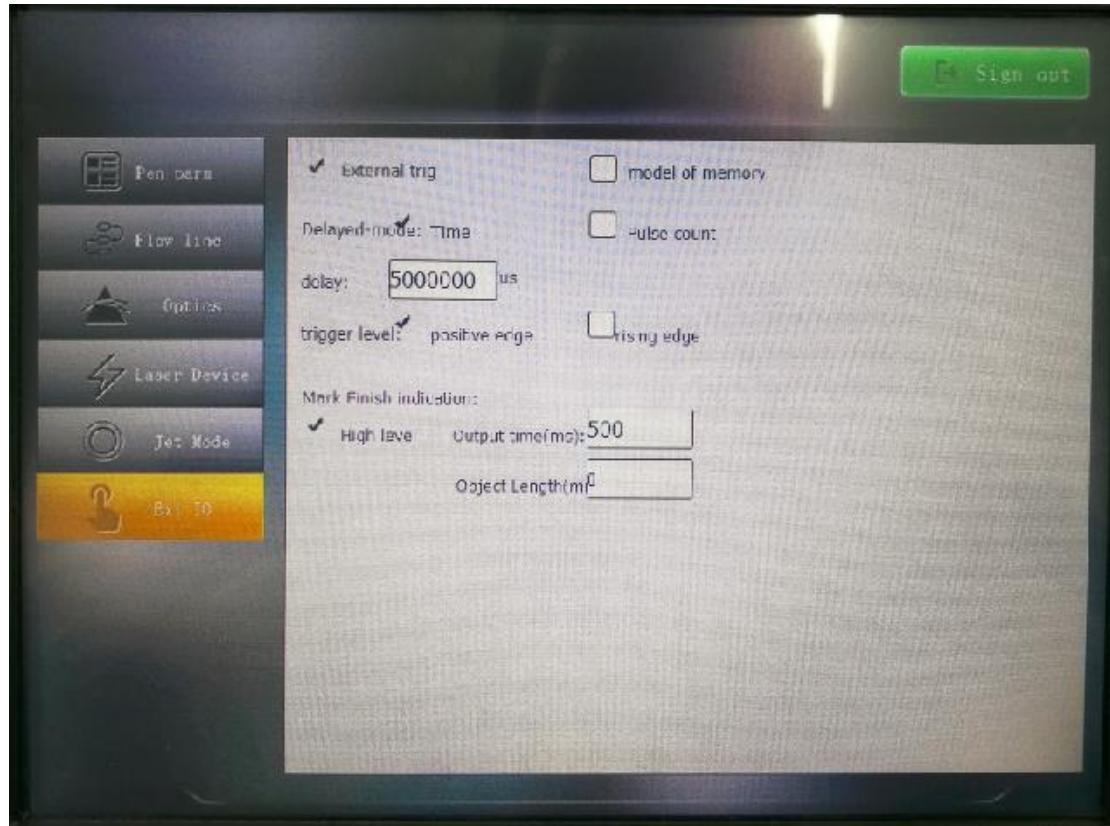

External trigger must be checked on the software to take effect.


There are two kinds of external trigger delay model: Time delay and pulse delay. Can not choose the pulse mod without encoder

notice: 1000000us is equal to 1second.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

2.2.6 Printing mode

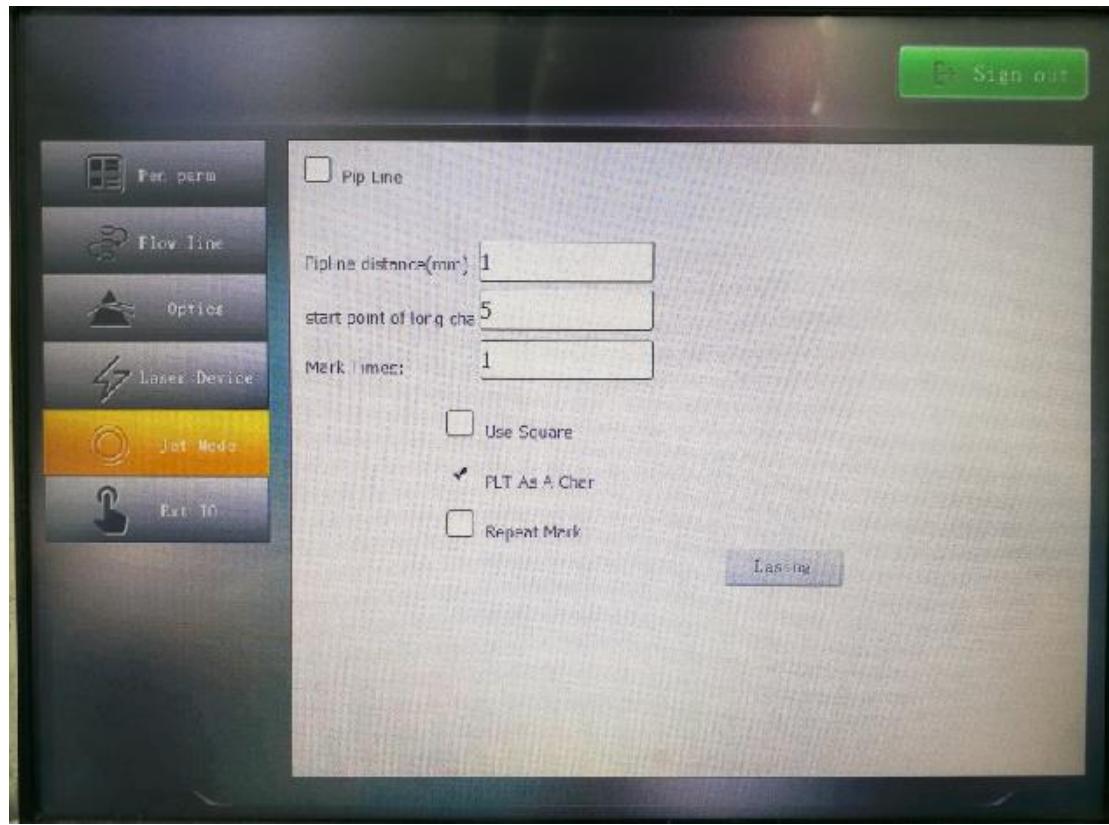

Pipeline: In the mode of production or cable, the pipeline mode need to be checked.

Pipeline distance: How many mm every printing again.

start point of long character : In the case of characters long flight, the starting point of the galvanometer is in middle position coordinates. The deviation can be modified by setting the starting position.

Use Square: Only for the printing square and other text are ignored when selected. mainly used for size and the number of product testing.

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

3. setting interface

3.1 system setting interface



Date/time: Adjust the system time .

correction of touching screen: Correction of touch screen function. If the touch screen is not accurate, enter the calibration interface to recalibrate.

file management: The code file to delete, copy, copy by clicking on the file management to enter.

version: Check the system software version, convenient maintenance

update: Update Software.

Startup Picture: user can update their boot LOG.

4system setting.

4.1 System initialization.

1. Choose the right type of laser. setting interface-control card-laser.
2. Set the size of the optics. set-optics- Focal length size interface.
3. Detection of X, Y axis is correct or not. Editing a text"ABC", then set correctly in optics-axis

Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

transformation

5.2 Normal flight initialization Settings

1. First, check or uncheck simulated flight and uncheck the encoder. setting-control card-marking on the fly
2. Set the size of the marking on the square. set-optics- Focal length size interface.
3. Check the square, In the printing interface of advanced options.
4. Choose the direction of the pulley, From left to right or from right to left. In the printing interface of advanced options.
5. Select normal flight. In the printing interface of advanced options.(If have a photoelectric, select external trigger)
- 6.printing, According to the square of the closed situation, adjust the product number or simulation speed. set-control- marking on the fly.

If square overlap is more, the accumulation and simulation speed decrease. If the square is not closed, the accumulation and simulation speed decrease

5.3 use of the long characters.

1. First, adjust simulation speed and product according to 5.2
2. Editing a text or a few piece of text. Text content can be present within the scope of the mirror, can also be outside the scope.
3. choose long flight characters In the printing in the advanced options. in the process of printing, adjust the starting position of the characters if not gush out. set-control card- Long character starting position. adjust the spacing between characters if speed is too fast.


5.4 use of meter mark.

1. First, adjust simulation speed and product according to 5.2
2. Create a text as shown below (Contains the serial number and fixed character "m"):



Jiatai International Company India

Add: Plot No.134, Beside metro pillar no.490, Swarm park Indl. Area, Mundka, New Delhi, India. 110041
Web: www.JIATAI.info Mail: JT@jiatai.info Tel: +91.96543 78126

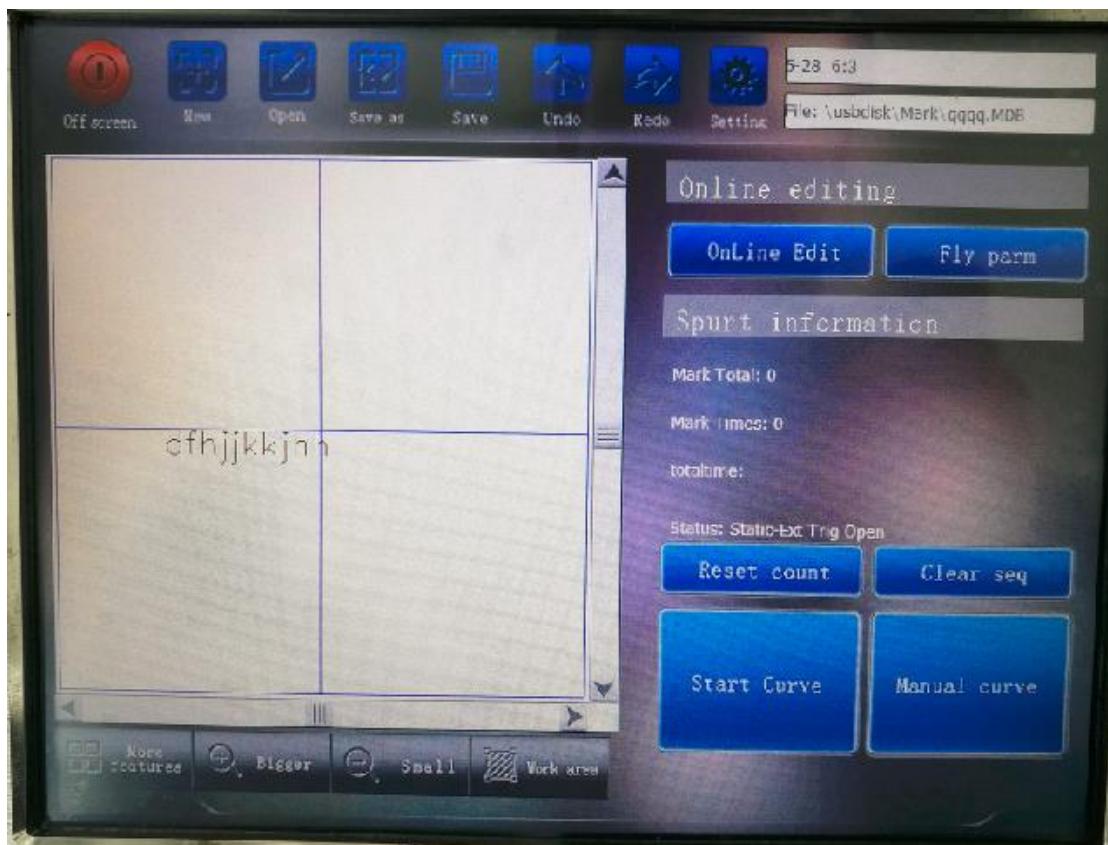

3. Enter the printing interface, choose long flight characters. Then select the assembly line direction.
4. Enter the set interface, pipeline mode of marking mode in control card setting. Pipeline spacing is 1000mm
5. Enter the printing interface, The status bar displays as follows:

Status: Long Text-Ext Trig Close-use encoder-Pip Mode-

6. Start printing.